

NEW SLAB

NOTES

Detail I - With Bar Splicer or Couplers: Bar spinor or couplers: Connect one (1) 1"x7"x10" steel R to the top layer of couplers with $2^{-5}8"$ ϕ boits screwed to coupler at approximate ℓ of each barrier panel.

Detail II - With Extended Reinforcement Bars: Connect one (1) 1"x7"x10" steel \mathbb{P} to the concrete slab with $2^{-5}8$ " ϕ Expansion Anchors or cast in place inserts spaced between the top layer of reinforcement at approximate & of each barrier panel.


Cost of anchorage is included with Temporary Concrete Barrier.

SECTIONS THRU SLAB

EXISTING SLAB


bars are in place and the concrete is ready to be


Temporary Concrete Barrier

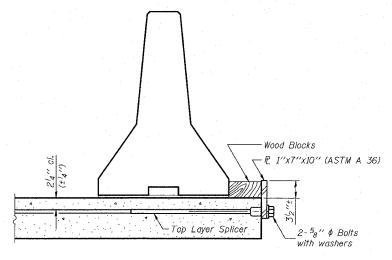

DETAIL I

The 1"x7"x10" Plate shall not be removed until Stage II Construction forms and reinforcement bars are in place.

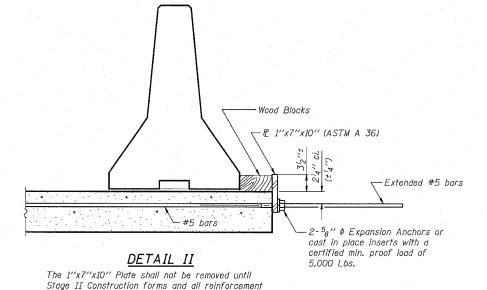

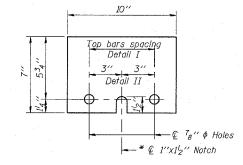

P 1"x7"x10"

* Required only with Detail II

TEMPORARY CONCRETE BARRIER IL RTE 38 OVER FRANKLIN CREEK F.A.P. RTE 567 SECTION (12)BR-1 LEE COUNTY STATION 439+12.17 S.N. 052-0020

136.109

ATE July 2004